

Captivating
CARAVANS

USER'S MANUAL



LED TV

Model: TRV-2418E

Read this manual carefully and retain for future reference

CONTENTS

 
Power Supply	3
Installation	4
Use and Maintenance	5
Important Safety Instructions	6-7
2. Accessories	6-7
3. Controls and connections	8
3.1 Front view/side view	8
3.2 Rear View	9
3.3 Remote Control	10
4. System Connections	13
4.1 Connecting to Power Supply	13
4.2 Connection to External AV Signal Source.....	14
4.3 Connecting to External AV Signal Source (HDMI)	14
4.4 Connecting to TV-Signal Input.....	15
5. TV OPERATION AND SYSTEM SETUP	16
5.1 Picture Menu	18
5.2 SOUND Menu.....	19
5.3 Timer Menu	21
5.4 System lock	21
5.5 Setting menu.....	22
5.6 CEC	23
5.7 Channer menu	24
5.8 Quick menu	29
6. Home	30
6.1 Apps.....	30
6.2 TV.....	32
6.3 MEDIA OPERATION.....	32
6.3.1 Photo	33
6.3.2 Music.....	34
6.3.3 Video	36
6.3.4 Applicatopns.....	37
6.4 Setting	38
7. Troubleshooting.....	46
Protection to Fix Card.....	47

Power Supply

Warnings


Do not touch the power plug with wet hands.

- Doing so may result in electric shock.

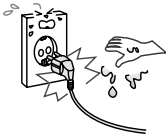


Do not use a damaged power cord or plug or a loose outlet.

 - Doing so may result in fire or electric shock.

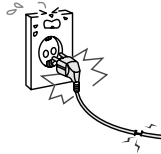

Do not plug several devices into the same outlet.

 - Doing so may cause the outlet to overheat and start a fire.




Insert the power plug fully into the outlet.

- A loose or improperly inserted power plug may result in fire.




Do not bend the power cord excessively or place heavy objects on it.

 - Doing so may result in fire or electric shock.



Be sure to ground the unit.

 
- Failing to do so may lead to electric shock when a short circuit or overload occurs. If necessary, install a ground fault circuit breaker. Never ground to a telephone line, lightning rod, or metal gas pipe. (Doing so may result in fire, electric shock, or other hazards.)



Cautions

When disconnecting the power cord from an AC outlet, always grasp it by the plug.

 - Pulling on the cord can damage the internal wire and may result in fire.



Always unplug the unit before cleaning.

- doing so may result in fire or electric shock.



The purpose of these precautions is to ensure user safety and prevent property damage. Be sure to read and observe all safety precautions.

 


Installation

Warnings


Do not place containers with liquids such as flower vases, soft drink cans, or medicine bottles or small metallic objects on top of the unit.

- If liquid enters the unit or any metal object falls into the unit, it may result in short-circuit, fire, or electric shock.

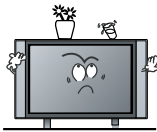


Do not place the unit where it is exposed to rain, excessive moisture or grease.

 - Doing so may result in fire, electric shock, malfunction, or deformation.

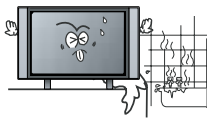

Do not use or store flammable or combustible materials near the unit.

 - Doing so may result in fire or explosion.




Do not place the unit on an unstable surface, such as a wobbly stand or sloped table, or on any surface whose area is smaller than the bottom area of the unit.

- If a child climbs on the unit, it could topple and fall onto the child, resulting in serious injury to the child or damage to the unit. Place the unit on a flat stable surface.




Do not place a burning candle, burning anti-mosquito incense, or lighted cigarette on top of the unit. Do not place the unit near any heat source such as a fireplace or space heater.

 - Doing so poses a serious risk of fire.

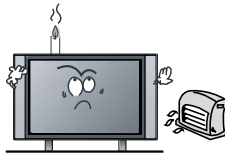


Do not place the unit in a poorly ventilated enclosure, such as a cabinet.

 - Doing so poses a serious risk of fire.

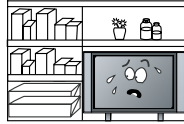


Do not run power cords near heat-producing appliances such as radiators, stoves, or irons.

 - The excessive heat could melt the insulation and expose live wires, resulting in fire or electric shock.



Install the antenna away from high-voltage power lines and communication cables and make sure it is installed securely.

 
- If the antenna touches a power line, contact with the antenna could result in fire, electric shock, serious injury, or death.



Cautions


Install the unit at an adequate distance from the wall to ensure sufficient ventilation.

 - If the temperature inside the unit rises, it may result in fire.



Do not cover the unit with a tablecloth, curtain, or other material.

 - If the temperature inside the unit rises, it may result in fire.



Be sure to place the unit on a level surface.



⚠ Warnings

Form a drip loop where the coaxial antenna cable enters your building to prevent rainwater from traveling along the cable and coming in contact with the antenna input terminal.

- If rainwater finds its way inside the unit, it may result in fire or electric shock.



- The following precautions are divided into "Warnings" and "Cautions".

⚠ Warning : Ignoring this precaution may result in death or serious injury.

⚠ Caution : Ignoring this precaution may result in injury or property damage.

 
To prevent injury, this television set must be securely attached to the floor/wall in accordance with the installation instructions

Use and Maintenance

Warnings


Disconnect the power cord from the wall outlet during an electrical storm.

- Not doing so may result in fire or electric shock.

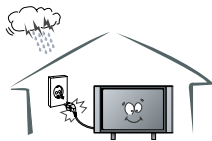


Do not insert any metal objects, such as a screwdriver, paper clip, or bent wire into the ventilation openings or A/V terminals.

 - Doing so poses a serious risk of fire or electric shock.

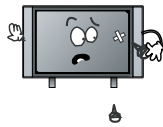


Do not allow children to climb or hang on the unit.

 - The unit could topple over onto a child and result in serious injury.

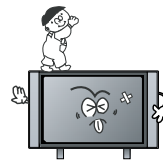

Never disassemble or modify the unit in any way. Do not attempt to service the unit yourself.

 
- Doing so may result in fire or electric shock. If the unit requires repair, contact the service center.

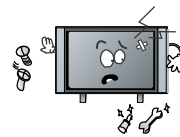

Cautions


When not using the unit for long periods of time, disconnect the power cord from the wall outlet.

 - Dust could accumulate over time on the unit and cause it to generate heat and ignite, or deteriorate insulation, which in turn may result in an electrical fire.




When moving the unit, be sure to turn off the unit and unplug the power cord from the wall outlet.

 - Moving the unit with the power cord connected to the outlet may cause damage to the cord, resulting in fire or electric shock.



If you notice any unusual odors or smoke around the unit, immediately disconnect the unit from the outlet and contact the service center.

 - Failure to do so may result in fire or electric shock.

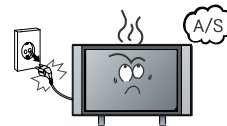

⚠ Warnings

 
When removing the batteries from the remote control, make sure children do not swallow them. Keep the batteries out of the reach of infants and children.

- If a child has swallowed a battery, seek medical attention immediately.



Always use two or more people to lift or move the unit.

- If the unit is dropped, it could be damaged or otherwise cause injury.




Wipe off any moisture, dirt, or dust on the power plug pins with a clean dry cloth.

- Failure to do so may result in fire or electric shock.




It is advisable to clean the interior of the unit at least once a year. Contact the store of purchase or service center for information.

 - Continuing to use the unit without cleaning off the dust build-up inside it may result in fire or electric shock.

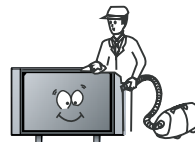

Always turn off the unit and unplug the power cord when cleaning the unit. Use a soft dry cloth to clean the unit.

 - Never clean with industrial strength polish, wax, benzene, paint thinner, air freshener, lubricant, detergent, or other such chemicals. Also, do not clean with a damp cloth.



Important Safety Instructions

Warnings and Precautions

To prevent any injuries, the following safety precautions should be observed in the installation, use, servicing and maintenance of this equipment.

Before operating this equipment, please read this manual completely, and keep it for future reference.

 
- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Do not clean with strong chemical agents
- 7) The appliance is intended for household use only, and not for commercial or industrial use.
- 8) Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
- 9) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 10) Care required with the use of this apparatus in tropical climates. Do not use the appliance under temperatures over 40°C.
- 11) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 12) Only use the attachments/accessories specified by the manufacturer.
- 13) Use only with a stand, or bracket, specified by the manufacturer, or sold with the apparatus.
- 14) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 15) Do not operate the unit if it is not working normally or has been damaged in anyway. Turn the unit off, unplug it from the power source and consult service personnel. Do not attempt to service this unit yourself.
- 16) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



Important Safety Instructions

- 17) Do not listen to headphones at high volumes; the excessive sound pressure from earphones can cause hearing loss.
- 18) Keep the player clean and never store it next to a heat source or in dirty, humid or wet places. Keep it out of direct sunlight.
- 19) Press the Player's button gently. Pressing them or the screen too hard can damage the player.
- 20) Do not subject the product to harsh impacts. Do not drop the appliance. This may result in damage to the product.
Do not touch, push or rub the surface of the LCD screen with any sharp or hard objects. When the surface of the LCD screen becomes dusty, wipe it gently with an absorbent cotton cloth or other soft material like chamois. Do not use acetone, toluene or alcohol to clean the surface of the screen. These chemicals will cause damage to the surface.
- 21) Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

WARNING: To reduce the risk of fire or electric shock, this apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

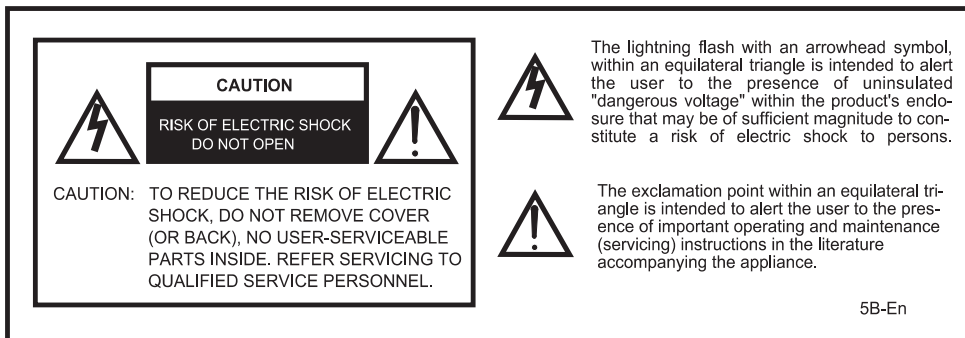

Apparatus with Class I construction shall be connected to a Mains socket outlet with a protective earthing connection.

WARNING

TO PREVENT DAMAGE WHICH MAY RESULT IN FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

Caution :

- These servicing instructions are for use by qualified service personnel only.
To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Only the adapter (Maker:Guangdong ABT Industrial Co., Ltd ,model no. : ABT040120) can only be used for the LED TV, whose input : 100-240Vac 50/60Hz 1.5A, Output: 12V $\overline{\text{---}}$ 4.0A, not allow to use the other model adapters.

2. Accessories



User's Manual



Remote Control



3. Controls and connections

3.1 Front view/side view

3. Controls and connections

3.1 Front view/side view



 
1. SOURCE: Display the input source list
2. MENU: Display the main OSD menu
3. CH-: Move to the lower programmer
4. CH+: Move to the upper programmer
5. VOL-: Decrease the volume level
6. VOL+: Increase the volume level
7. POWER: Turn the TV On or OFF

The LED TV input: 12V $\overline{\text{---}}$ 4.0A



ON is indicated by GREEN LED
 OFF (standby) is indicated by RED LED

3.2 Rear View

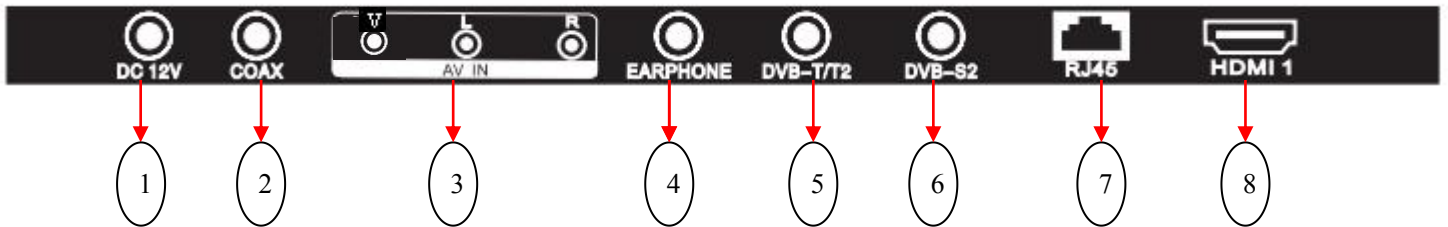

1. DC 12V Jack (DC power input)
2. Coaxialjack (For Coaxial Singal output)
3. AV IN Jack (Connecting for AV signal input in composite mode, V replaces of Video input, L/R replaces of audio Left and right channel.)
4. Headphone Jack (Connecting for headphone)
5. Public Antenna input jack (DVB-T/T2) (Connected to external antenna to receive the ATV/DTV program)
6. Coaxial Antenna input jack ((DVB-S2) (Connected to external antenna to receive the ATV/DTV program)
7. RJ45 IN (For internet data transmission)
8. HDMI Input Jack1 (Connecting for HDMI signal)
9. HDMI Input Jack2 (Connecting for HDMI signal)
10. USB1、 USB2 Jack (For input signal by USB port)

3.3 Remote Control

1. POWER button

Press to enter or exit the standby mode.



2. Mute button

Press to select enter the source selecting menu, press the ▲/▼ direction buttons or press the MUTE button repeatedly to select desired mode and press the ENTER button to enter the selected mode.

3. Number buttons (0~9)

Press to select numbers.

4. button

Press this button to enter a program number for multiple program channels such as 2.1, etc.

5. +/- • button

Press this button to enter a program number for multiple program channels such as 2-1, etc.

6. SUBTITLE

Press into the Subtitle language menu.

7.P-MODE

Press to select the picture mode: choose User, Standard, Dynamic or Mild.

8. S-MODE

Press this button to change the audio mode: User, Standard, Movie or Music.

9. MENU

Press to enter or exit the setup menu.

10. EXIT button

Press to exit all the OSD on the screen.

11.VOL +/- button

Press to increase or decrease the volume.

12.SLEEP

Press into the Subtitle language menu.

13.AUDIO

Press this button to switch the tracks carried by the program.

14.SUBPAGE

Press this button to switch the captions carried by the program.

15.CH+/- button

In ATV or DTV mode, press to select analog channel or digital channel.

17. HOLD

Display the selected favorite up programmers.

HOLD(Teletext Mode)

Hold on or off for current page display.

18. MIX

Display the selected favorite programmers.

Mix(Teletextmode)

TV and TXT pictures are mixed together on a transparent background.

19. REVEAL

Display the selected favorite down programmers.

20. CANCEL

Press to cancel what you are doing.

21. TITLE

Press this button to freeze the analogue text image on the screen

TITLE (DVD Mode)

Brings up the DVD title in DVD Mode .

22. MEDIA

Press into the Media.

23. TT/CC

Request the index page (Teletext mode)

LIST (TV and DTV Mode)

Press to show Analog or Digital programme list.

24. LIST

Press into the Chanel List.

25. EPG

Press into the EPG List.

26. SIZE

Press this button to change the proportion mode:Wide,4:3,Auto,Panorama.

27. EJECT

Select the DTV.RADIO mode.

EJECT Button (DVD)

28. ◀

Skip backward button.

29. ▶/||**30. ■**

Stop the playback and Exit to the up-menu.

31. ▶

Skip forward Button.

32. ◀◀

Playing backward fast.

33. REC

Hot key to retained.

34. USB

Hot key to retained.

35. ►►

Playing forward fast.

36. ●

Record Button.



Preparation of Remote Control

Place the remote control on an even surface and insert the supplied batteries into the remote control as follows.

1. Softly push the back cover to open the battery compartment.



2. Insert two batteries(1.5V size AAA), please make sure the polarity matches the marks inside the compartment.



 
3. Softly press the back cover to close it.



Under normal use the battery will last for six months.
Take out battery when the remote is not in use for a long time.

Using of Remote control

Point the remote control unit from on more than about 7m from the remote control sensor and within about 60 degrees of the front of the unit.

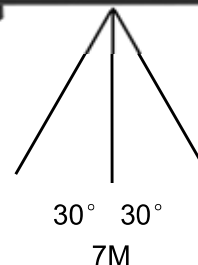

The operating distance may vary depending to the brightness around.



Do not point bright lights directly at the remote control sensor.

Do not place objects between the remote control unit and the remote control sensor.

 
Do not use this remote control unit while simultaneously operating the remote control unit of any other equipment.

4. System Connections

Do not connect the power cord until all other connections have been made. Ensure that you observe the color cord when connecting audio and video cables.

4.1 Connecting to Power Supply

1. Connect the power cord correctly as shown.
2. Press the POWER switch of your LCD TV to switch on the LCD TV. The power indicator on the front panel lights up in Green.

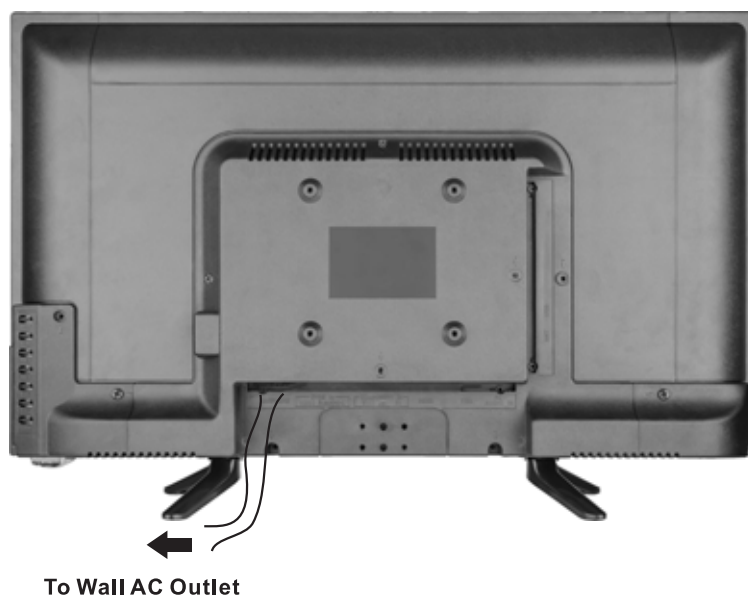


4.2 Connection to External AV Signal Source

Use the audio and video cable to connect the input jacks on the rear panel of the unit to the external AV signal source.

Connect the unit and the external AV signal source to the respective jacks with the S-Video cable.

 Ensure that you observe the color cord when connecting audio and video cables.

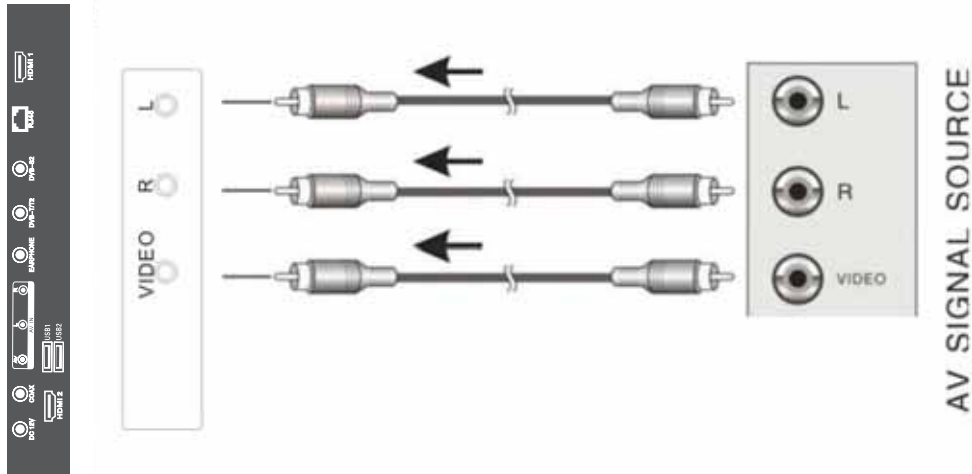


After connection, turn on the power of the unit and the external AV signal source. Press **SOURCE** then direction buttons to select AV mode, and then press the **ENTER** button to confirm.

The L/R audio input jacks can be used in the both Composite modes.

4.3 Connecting to External AV Signal Source (HDMI)

 Follow the figure below to connect an HDMI signal source to the HDMI jack on the rear panel of the unit.

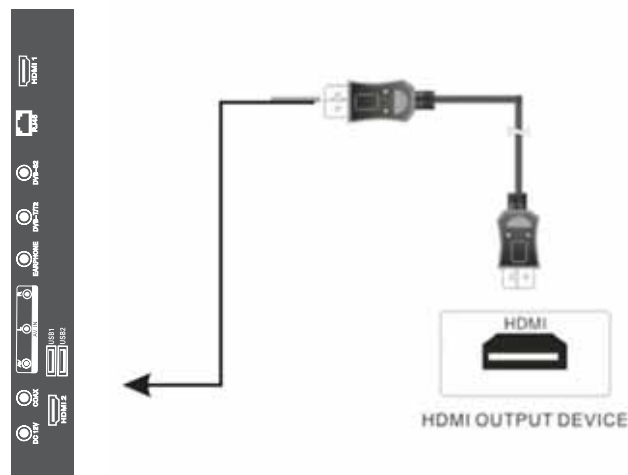


After connection, turn on the power of the unit and the external AV signal source and use the **SOURCE** and the direction buttons to select HDMI mode, and then press the **ENTER** button to confirm.



HDMI provides both audio and video signals and typically provides superior image quality to component or composite.

4.4 Connecting to TV-Signal Input

 Connect the TV signal cable (the antenna cable, for example) to the antenna input jack on the back of the unit so that you can receive television programmers.

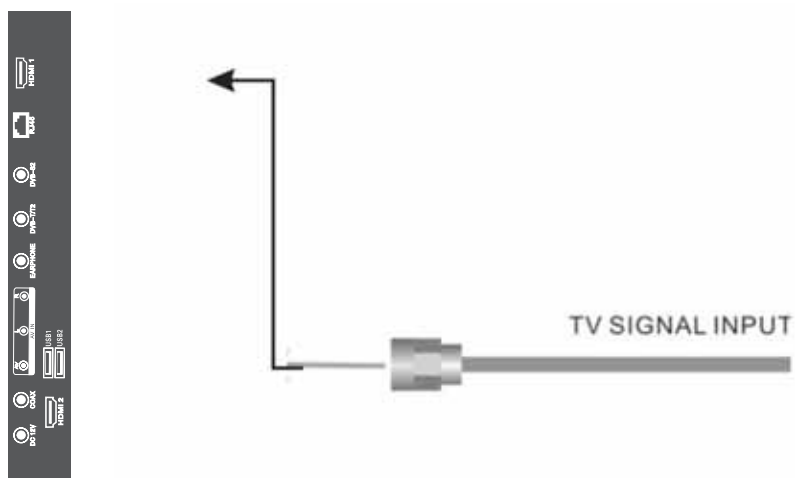

After connection, turn on the power of unit. Then press the SOURCE button to select ATV or DTV mode and conduct program selection.

5. TV OPERATION AND SYSTEM SETUP

SELECT INPUT SOURCE

 
Press **SOURCE** button to display the input source list;

Press **▲/▼** button to select the input source you want to watch;

Press **ENTER** button to enter the input source;




- Press **MENU** button to display the MAIN OSD MENU;
- Press ▲/▼ button to select the MENU you want;
- Press **ENTER** button or ► button to enter the sub menu, and press ◀ button to return back to the previous menu.
- Press ▲/▼ button to select the option and then press **ENTER** button or ► button to enter the submenu, press ◀/▶ button to adjust the value or press ◀/▶ button to select in the sub menu;
- You can press **MENU** button to save and return back to the previous menu, and press **EXIT** button to exit the entire menu.

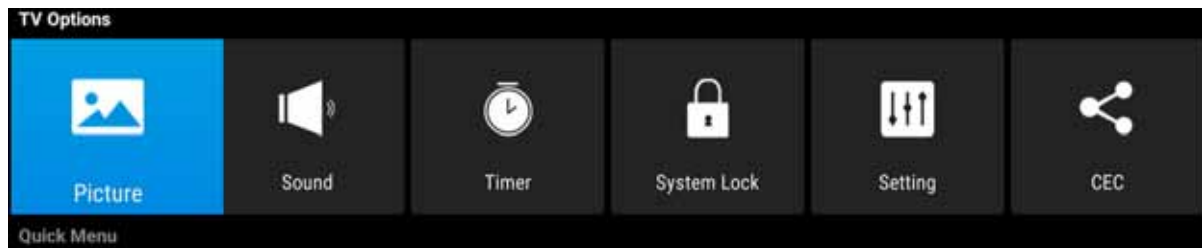

Press **INFO** button on the remote control to display program information.

 1. Current program Number.
2. The NICAM mode of current program.
3. The sound system of current channel could be changed on **Analog Manual Search** Menu.

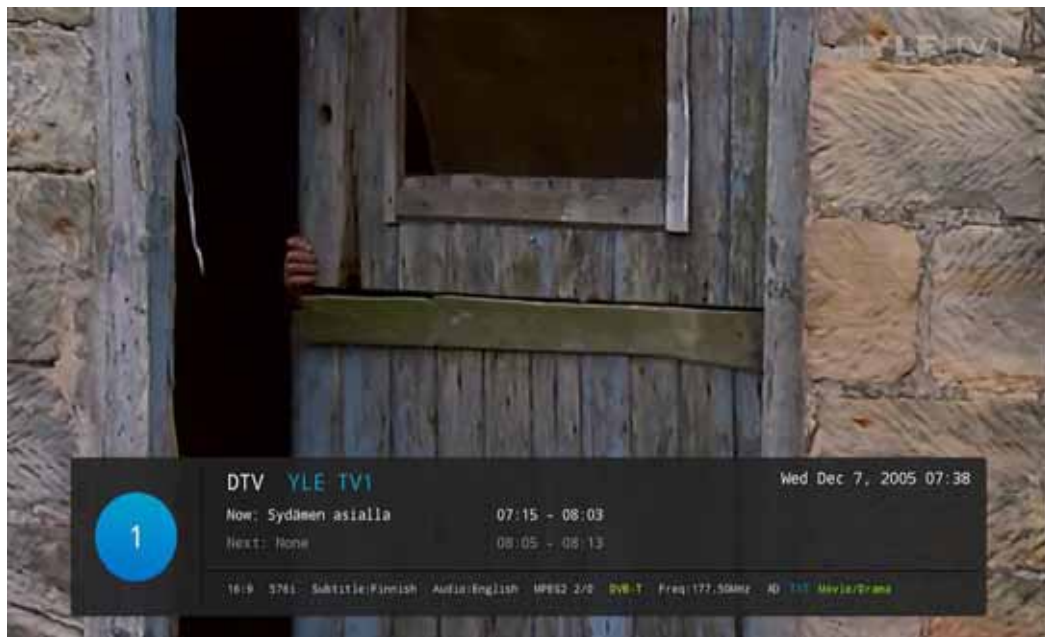


5.1 Picture Menu

The picture is for a reference only; the actual item is the standard.

Press **TV MENU** button to display the main menu.

Press **▲/▼** button to select **Picture** in the main menu, and then press **ENTER** button to enter.

 1. Press **▲/▼** button to select the option that you want to adjust in the Picture menu, and then press **ENTER** button or **▶** button to enter.
2. Press **◀/▶** button to adjust or press **▲/▼** button to select. And press **ENTER** button to select the sub menu.
3. After finishing your adjustment, press **MENU** button to save and return back to the previous menu, and press **EXIT** button to exit the entire menu.

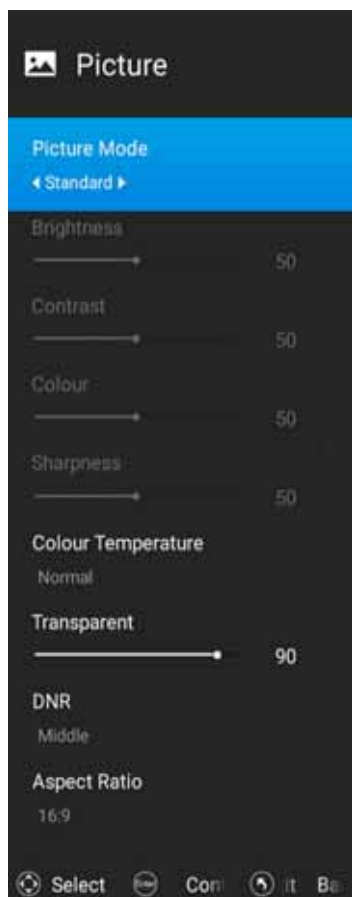


5.1.1 Picture Mode

Press **▲/▼** button to select Picture Mode, then press **ENTER** button to enter and press **◀/▶** button to select. (Available Picture Mode: User , Standard, Dynamic,Mild)

You only can change the value of brightness, contrast, sharpness, color, when the picture is in User mode.

 TIPS: You can press **P-MODE** button on the remoter control again and again to change the picture mode directly.

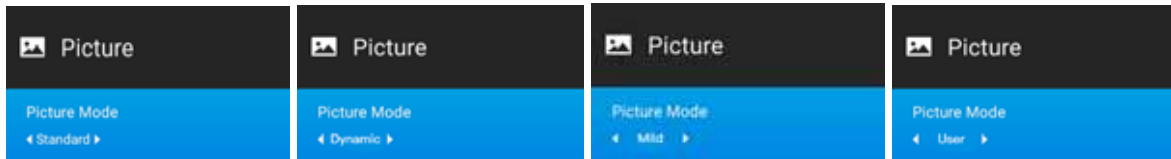

5.1.2 Aspect Ratio

Press ▲/▼ button to select Aspect Ratio, then press **ENTER** button to enter and press ◀/▶ button to adjust. Then press **MENU** button to return back the previous menu directly.

5.1.3 Colour Temperature

Press ▲/▼ button to select **Colour Temperature**, then press **ENTER** button to enter and ◀/▶ button to select Standard, Cool, Warm.

5.1.4 DNR

Press ▲/▼ button to select **DNR**, and then press **ENTER** button to enter and ◀/▶ button to select Off, Low, Middle, High.

 
5.2 SOUND Menu

The picture is for a reference only; the actual item is the standard.

Press **MENU** button to display the main menu.

Press ▲/▼ button to select **Sound** in the main menu, and then press **ENTER** button or ▶ button to enter.


1. Press ▲/▼ button to select the option that you want to adjust in the Sound menu, then press **ENTER** button to enter.
2. press ◀/▶ button to adjust or press ▲/▼ to select, and press **ENTER** button to select submenu.
3. After finishing your adjustment, Press **MENU** button to save and return back to the previous menu, or press **EXIT** button to exit the entire menu.

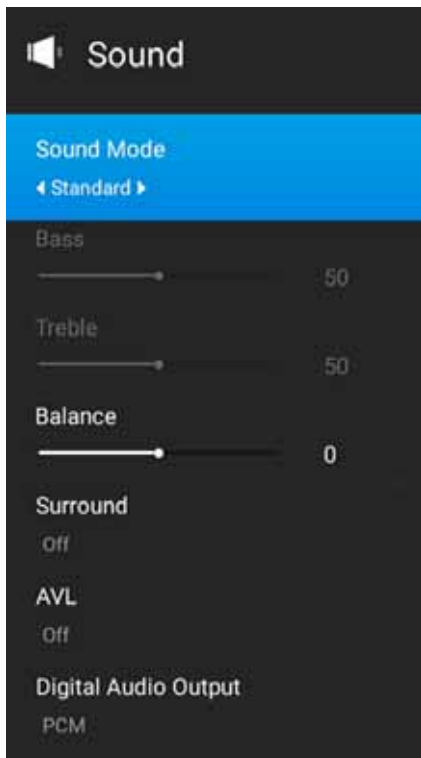

5.2.1 Sound mode

Press ▲/▼ button to select **Sound mode**, and then press **ENTER** button to enter. And then press ◀/▶ button to select. (Available Sound mode: User, Standard, Music, cinema). You can change the value of bass and treble, Balance and EQ, when the sound is in User mode.

 TIPS: You can press **S-MODE** button on the remote control to change the Sound Mode directly.

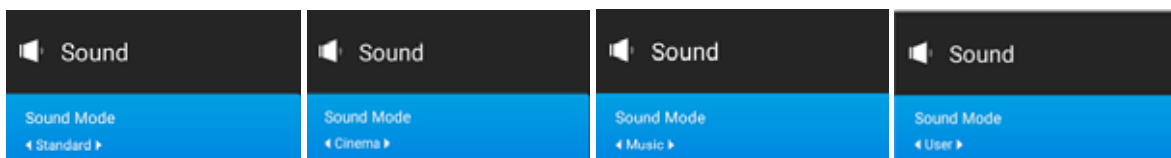

5.2.2 Balance

Press ▲/▼ button to select **Balance**, then press **ENTER** button to enter and press ◀/▶ button to adjust. Then press **MENU** button to return back the previous menu directly.

5.2.3 Surround

Press ▲/▼ button to select **surround**, then press **ENTER** button to enter and press ◀/▶ button to adjust. Then press **MENU** button to return back the previous menu directly.

5.2.4 AVL

Press ▲/▼ button to select **AVL**, then press **ENTER** button to enter and press ◀/▶ button to adjust. It can only be adjusted under user mode Then press **MENU** button to return back the previous menu directly.

5.2.5 Digital Audio output

Press ▲/▼ button to select **SPDIF Output**, then press **ENTER** button to enter and press

◀/▶ button to select.

(Available SPDIF mode: RAW, PCM, OFF)

 
Then press **ENTER** button or ▶ button to enter and press ◀/▶ button to adjust, then press **MENU** button to return back the previous menu directly.

5.3 Timer Menu

5.3.1 OSD Timer

5.3.2 Sleep Timer

5.3.3 Auto Power Down

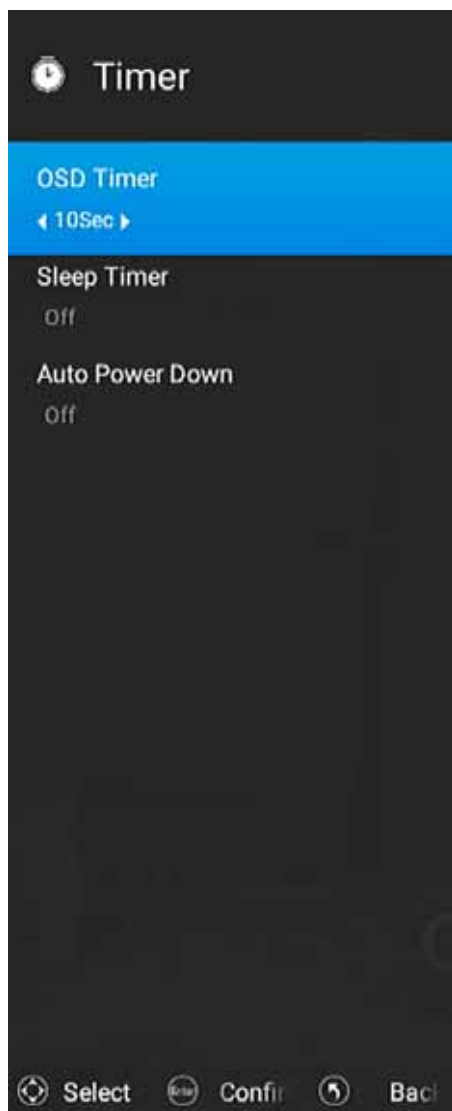

5.4 System lock

5.4.1 System Lock

5.4.2 Source lock

5.4.3 Channel lock

5.4.4 Program Restrictions

5.4.5 Change PIN



 
 
5.5 Setting Menu

The picture is for a reference only; the actual item is the standard.

Press **MENU** button to display the main menu.

Press **▲/▼** button to select **SETTING** in the main menu, and then press **ENTER** button to enter.

1. Press **▲/▼** button to select the option that you want to adjust in the **SETTING** menu, and then press **ENTER** button to enter.
2. Press **◀/▶** button to select and press **ENTER** button to select the sub menu.
3. After finishing your adjustment, press **MENU** button to save and return back to the previous menu, or press **EXIT** button to exit the entire menu.

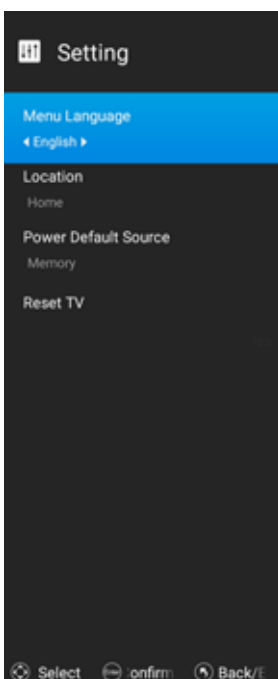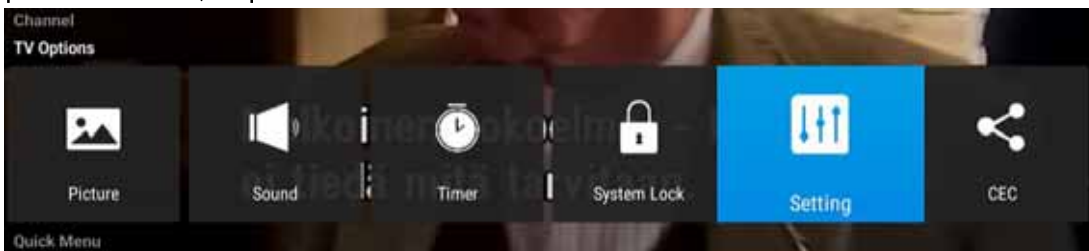

5.5.1 Menu Language

Press ▲/▼ button to select **Menu Language**, and then press ◀/▶ to select On or Off.

5.5.2 Location

Press ▲/▼ button to select **Location**, and then press ◀/▶ to select.

5.5.3 Power Default Source

Press ▲/▼ button to select **Power Default Source**, and then press ◀/▶ to select On or Off.

5.5.4 Reset TV

Press ▲/▼ button to select **Reset TV**, and then press **ENTER** button to enter

5.6 CEC

5.6.1 HDMI CEC Setup

5.6.2 Device Auto Power Off

5.6.3 TV Auto power on

5.6.4 CEC device list

5.6.5 Amplifier Support ARC

5.6.6 Speaker Preference

 


5.7 Channel Menu

The picture is for a reference only; the actual item is the standard.

Press **MENU** button to display the main menu.


Press **▲/▼** button to select **Setup** in the main menu, then press **ENTER** to enter.

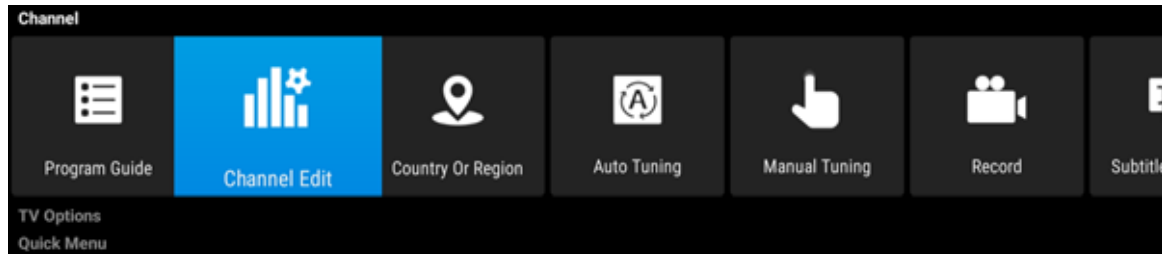

1. Press **▲/▼** button to select the option that you want to adjust in the **Setup** menu, then press **ENTER** or **▶** button to enter.
2. Press **◀/▶** button to adjust or press **▲/▼** button to select.
3. After finishing your adjustment, press **MENU** button to save and return back to the previous menu and press **EXIT** button to exit the entire menu.

5.7.1 Program Guide

 
1. In the DTV source, you can start channel information function by pressing **Program Guide** button on the remote control.. The prompt window will appear as follows:

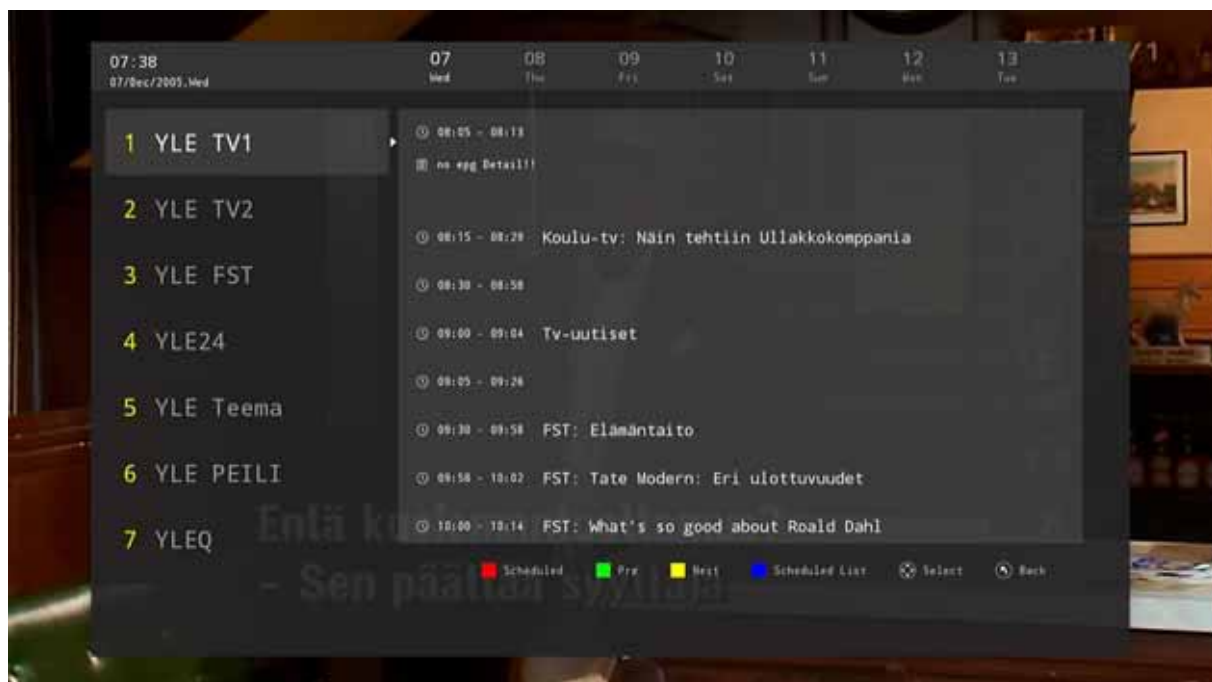

5.7.2 channel Edit


Press **▲/▼** button to select **channel Edit**, and then press **ENTER** button to play the channel selected. The menu will appear as follows:

 Select to open the auto searching page, and press Enter button to start the scan.

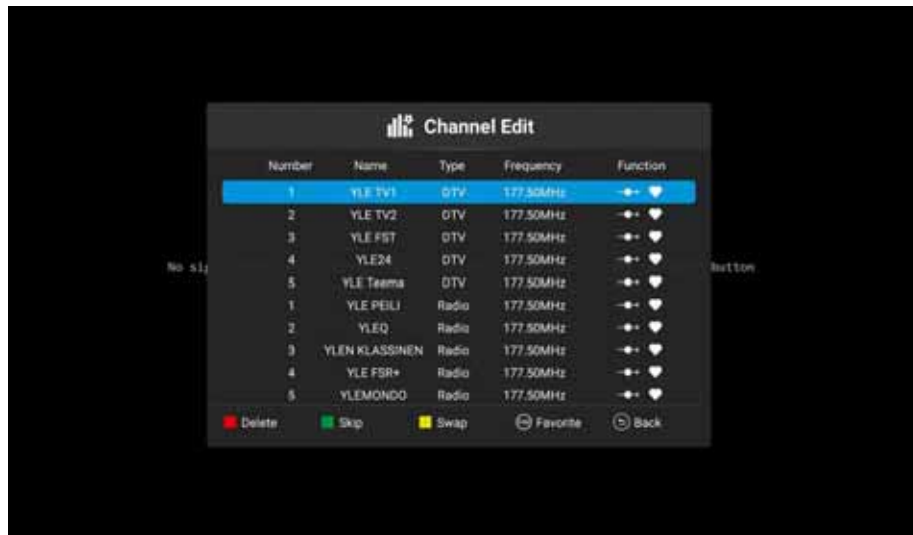


5.7.3 Country or Region(Germany)

 Press ▲/▼ button to select **Country and Region**, and then press **ENTER** button to play the channel selected. The menu will appear as follows:

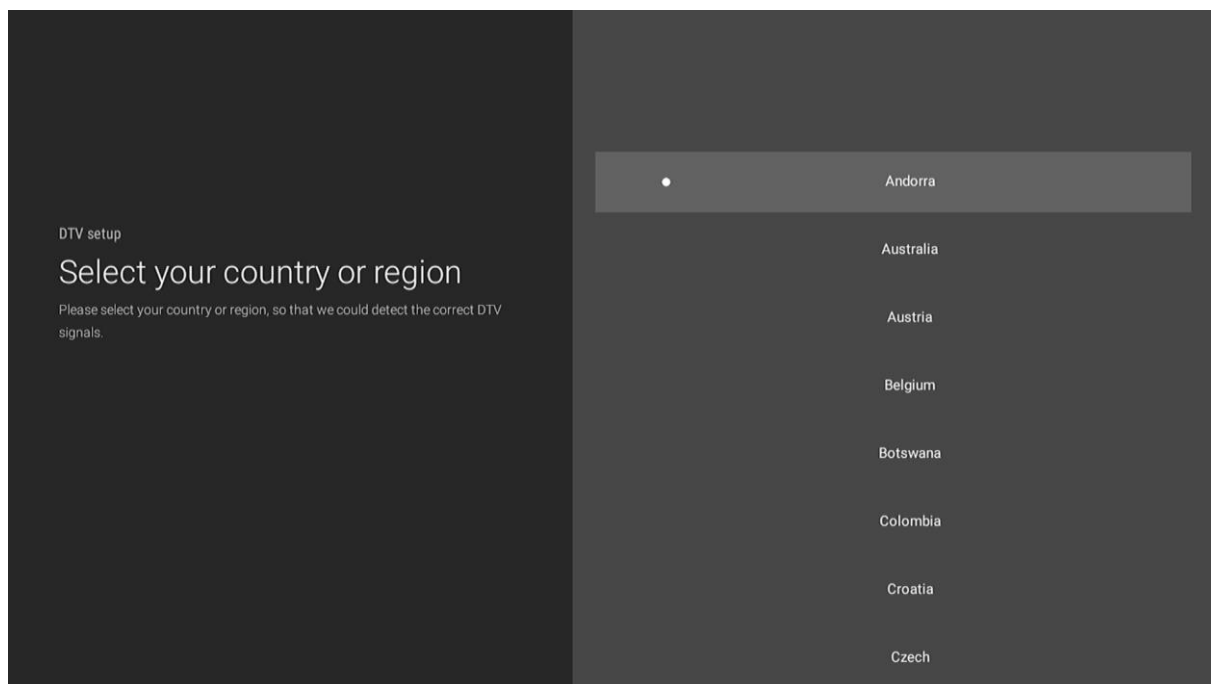


5.7.4 Auto Tuning

 Press ▲/▼ button to select **Auto Search**, and then press **ENTER** button to play the channel selected. The menu will appear as follows:

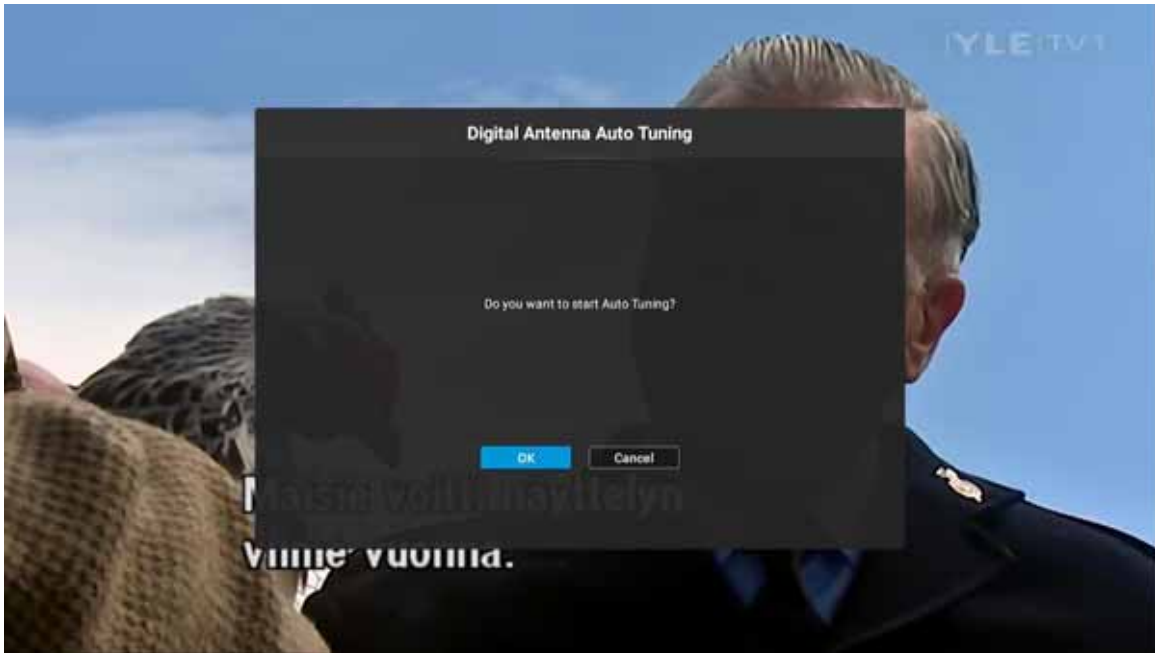


5.7.5 Manual Tuning

 Press **▲/▼** button to select **Manual Tuning**, and then press **ENTER** button to play the channel selected. The menu will appear as follows:

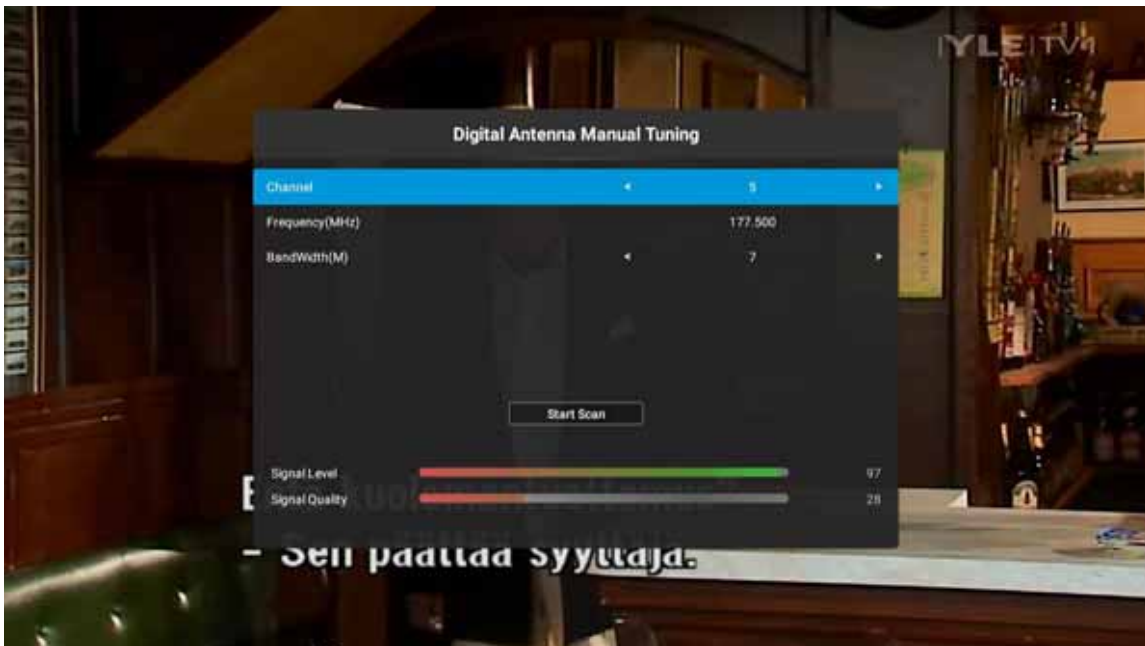


5.7.6 Record menu

 Press **▲/▼** button to select **Record menu**, and then press **ENTER** button to play the channel selected. The menu will appear as follows:

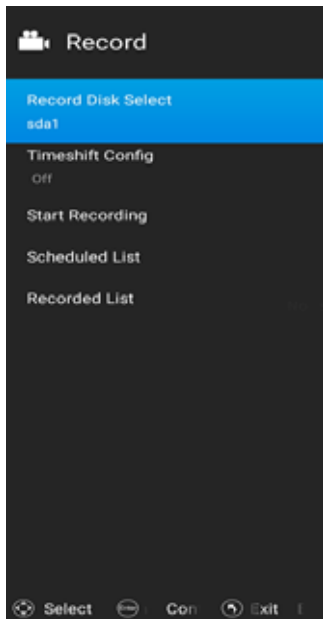

5.7.7 Subtitle Language

 Press ▲/▼ button to select **Subtitle Language**, and then press **ENTER** button to play the channel selected. The menu will appear as follows:

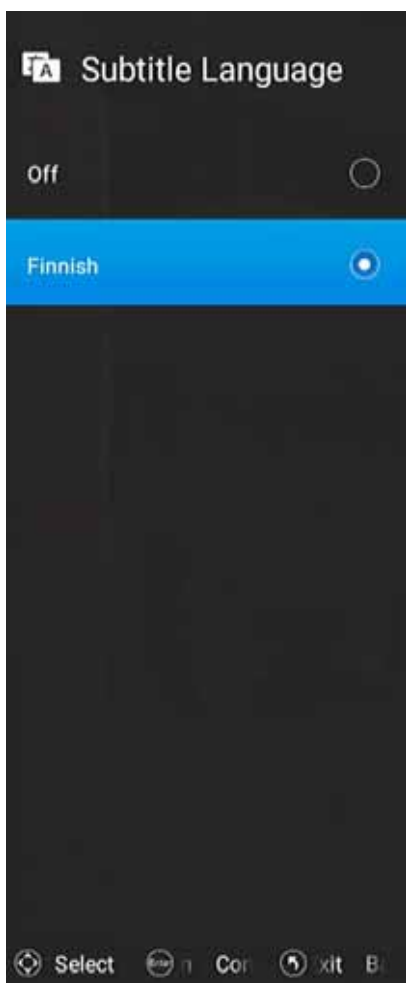


5.7.8 Multi Audio

Press ▲/▼ button to select **Multi Audio**, and then press **ENTER** button to play the channel selected. The menu will appear as follows:




5.7.9 DTV Setting

 Press ▲/▼ button to select **DTV Setting**, and then press **ENTER** button to play the channel selected. The menu will appear as follows:

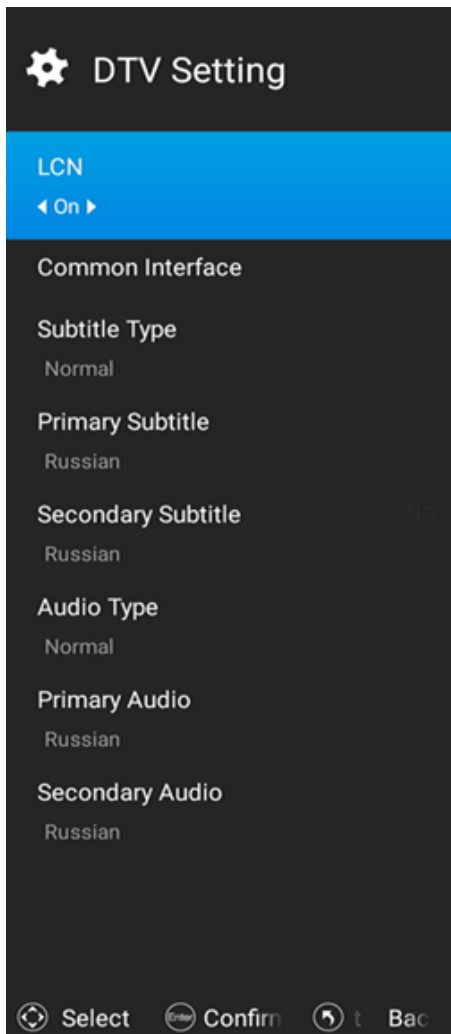

 5.8 Quick Menu

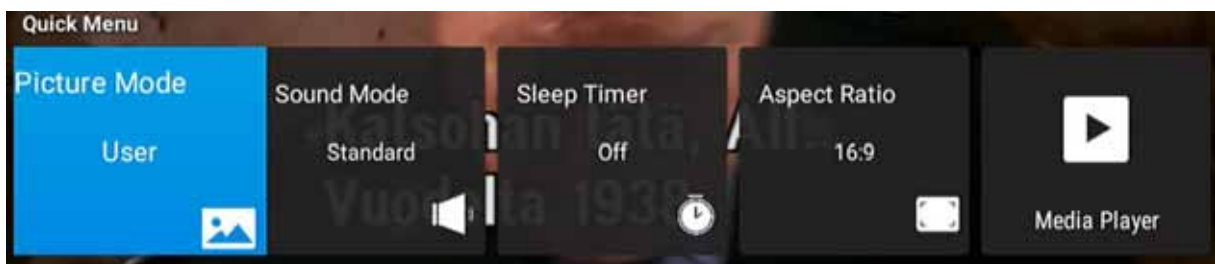


6. Home


6.1 Apps

The picture is for a reference only; the actual item is the standard.

 Press ▲/▼ button to select **APPS** in the **Source Menu**, and then press **ENTER** or ► to enter.

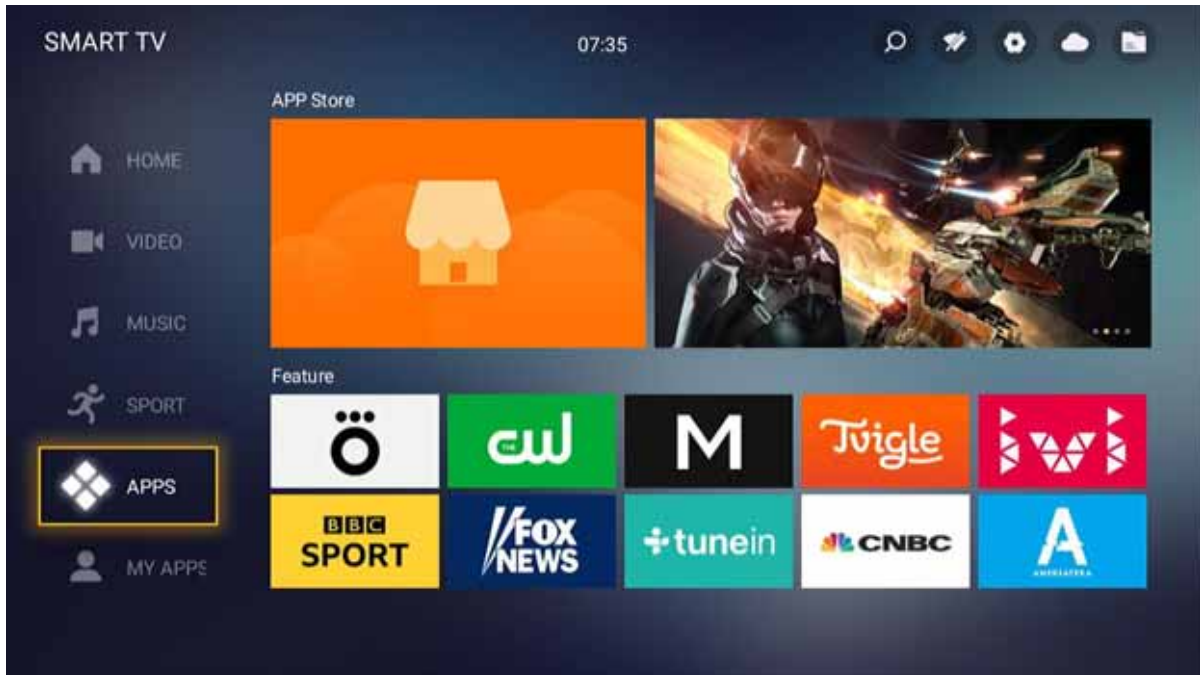

 you can button to select Tv Store to download apps what you want, As the figure shows.

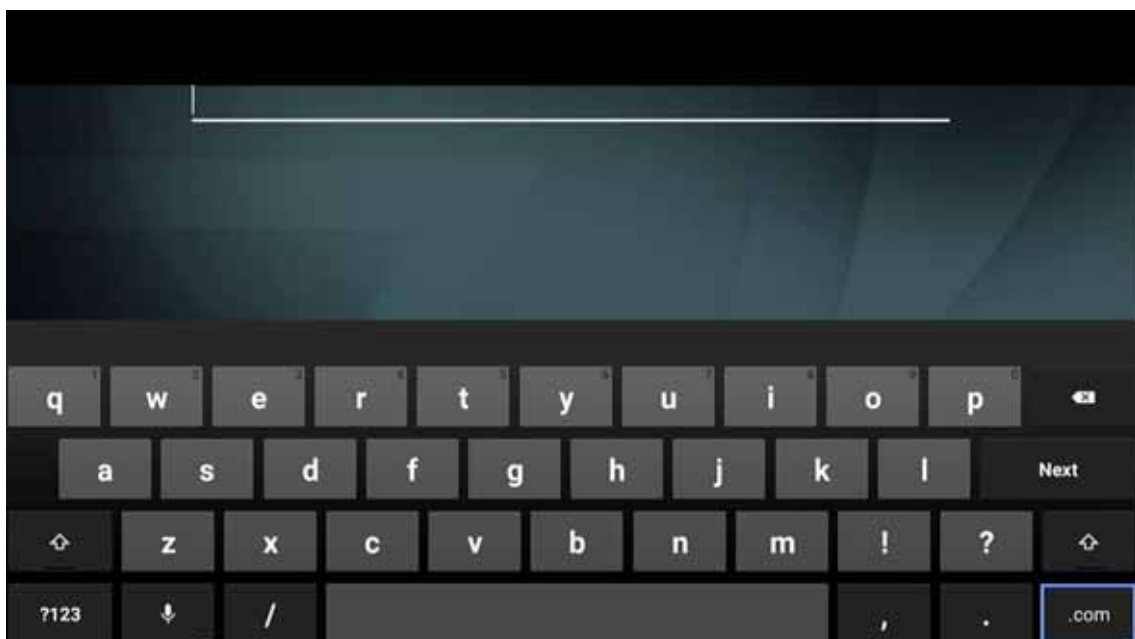



you can also select Browser to search the internet, As the figure shows.



6.2 TV

The picture is for a reference only; the actual item is the standard.

Press ▲/▼ button to select **TV** in the **Source Menu**, and then press **ENTER** or ► to enter.



6.3 MEDIA OPERATION

The picture is for a reference only; the actual item is the standard.

Note: Before operation **MEDIA** menu, Plug in USB device or memory card, then press **SOURCE** button to set the Source to Media.

Press ▲/▼ button to select **MEDIA** in the **Source Menu**, and then press **ENTER** or ► to enter. You can also enter the Media by pressing **MEDIA** button on the remote control.



6.3.1 Photo

The picture is for a reference only; the actual item is the standard.

Press ◀/▶ button to select **Music** in the main menu, and then press **ENTER** button to enter.

Press **EXIT** button to return back to the previous menu.





You can see the information of the current playing photo after press **INFO** button, then press **▶ ||** button to play or pause, you can see the playing state in the right.

Then press **▲/▼** or **◀/▶** button to rotate the picture.

Notes: Other menu and description are the same as that for Movie menu.

6.3.2 Music

The picture is for a reference only; the actual item is the standard.

 
Press **◀/▶** button to select **Music** in the main menu, and then press **ENTER** button to enter.

Press **EXIT** button to return back to the previous menu.





You can see the information of the current playing sonny at the left of the menu.

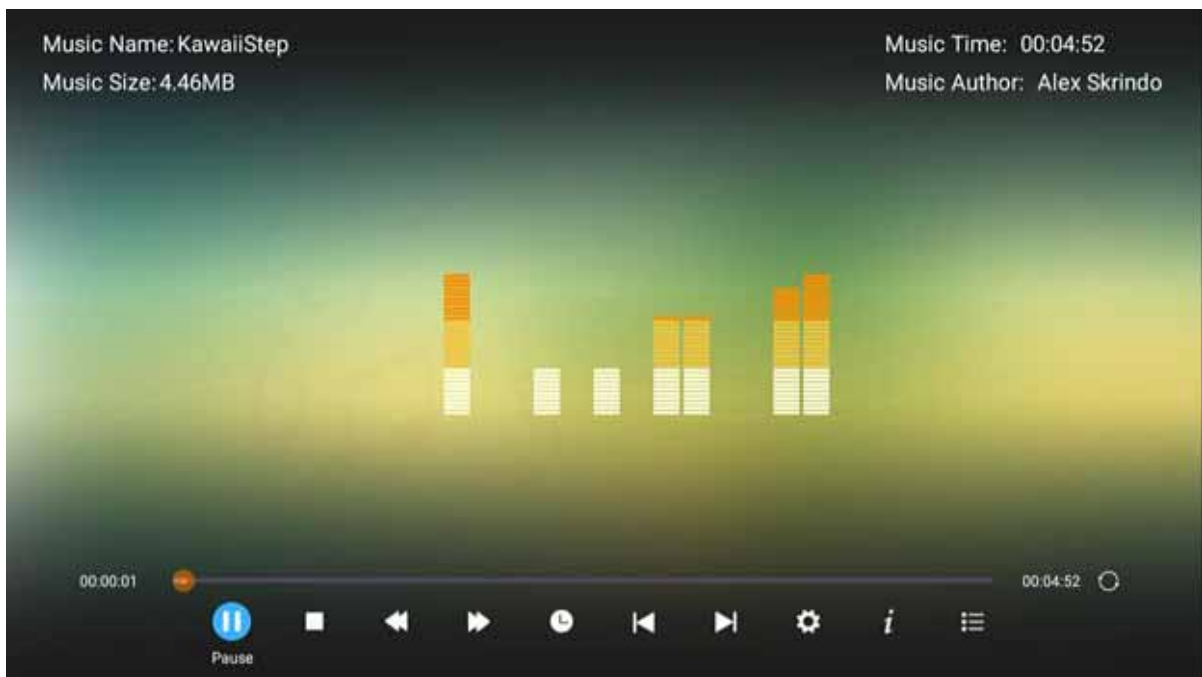

6.3.3 Video

The picture is for a reference only; the actual item is the standard.

Press ◀/▶ button to select **Video** in the main menu, then press **ENTER** button to enter.

 
Press **EXIT** button to return back to the previous menu.



Press ▲/▼ button to select the folder that you want to view.

Press **ENTER** button to select the sub folder.



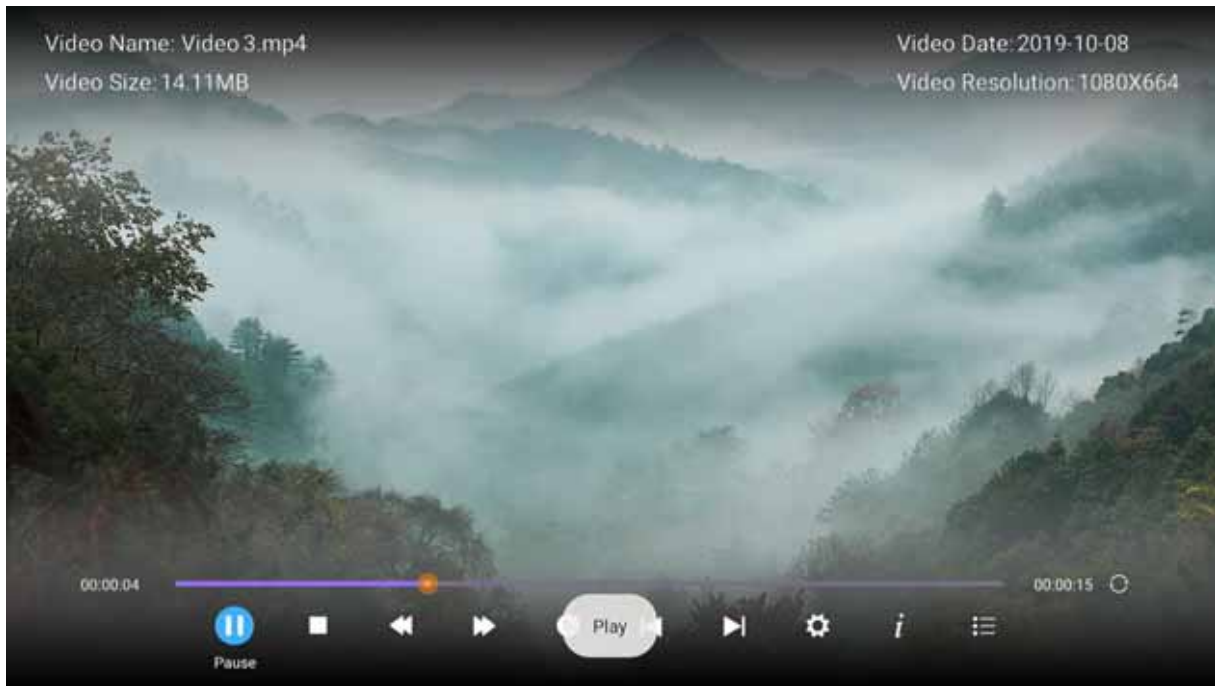

Press **ENTER** button or ► || button to play,

Press ■ button or **EXIT** button to stop playing.

Press the ◀ button to return back to previous page.

You can see the information of the current playing media at the first few second or after press **INFO** button.

6.3.4 Applications

The picture is for a reference only; the actual item is the standard.

Press ◀/▶ button to select **Video** in the main menu, then press **ENTER** button to enter.

Press **EXIT** button to return back to the previous menu.



6.4 Setting

The picture is for a reference only; the actual item is the standard.

Press ▲/▼ button to select **Setting** in the **Source Menu**, and then press **ENTER** or ► to enter.

 


6.4.1 Network Setting



Press ▲/▼ button to select the Network that you can open the Wi-Fi. As the figure shows.



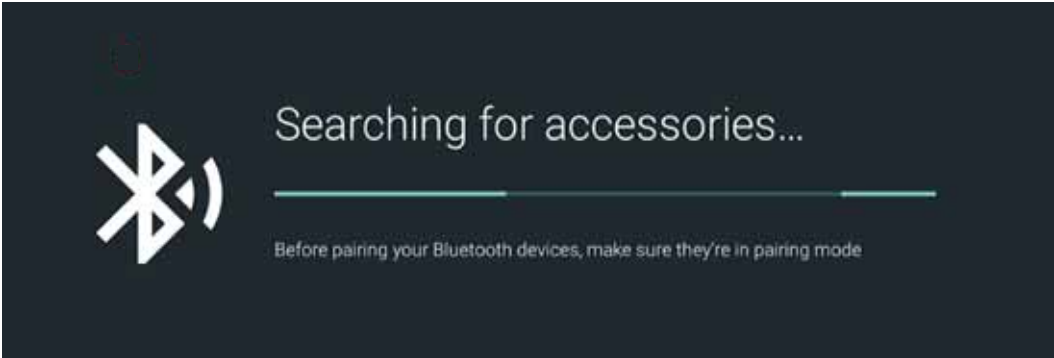



6.4.2 Time Setting



6.4.3 Common





Press ◀/▶ button to select the Language that you want.
As the figure shows.



Press ◀/▶ button to select the time that you can change. As the figure shows.



 
Press ◀/▶ button to select application that you can know how many apps you have downloaded and this feature you also can unload the app. As the figure shows.



Press ◀/▶ button to select reset that you can reset the system.
As the figure shows.



Press ◀/▶ button to select system update that you can update the system.
As the figure shows.

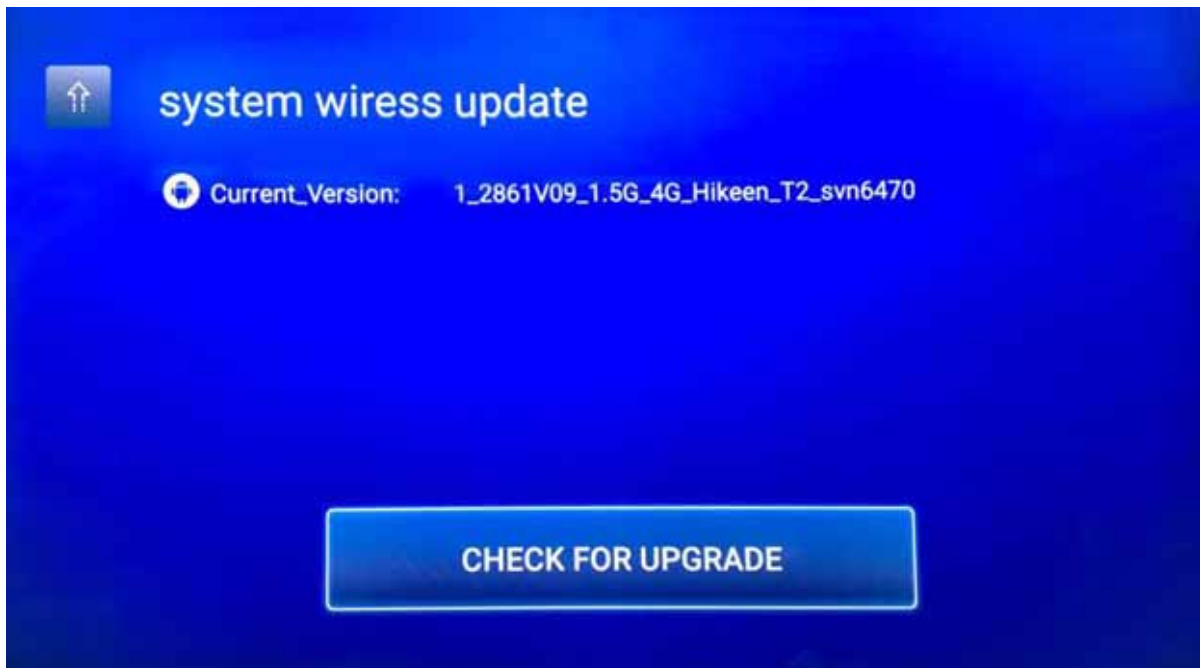

Press ◀/▶ button to select the About TV that you can find the information about TV. As the figure shows.




7. Troubleshooting

Carry out the problem-solving measures described in the following section before contacting customer support. Turn off the device immediately as soon as you suspect a malfunction and unplug the power plug. Do not attempt to repair the device yourself.

SYMPTOM	CHECK ITEM
LCD screen stays Dark.	Make sure the unit is turned on and the connections are correct. Make sure the power adapter is correctly connected.
There is no sound	Make sure the system connection is correct. Make sure the power of speaker is turned on.
There is no picture or picture move up and down unsteady.	Check if the connections with the external AV signal source are correct. Correctly set the items in the picture menu. Check if the video type input signal is not corresponding to the unit. Make sure the unit is turned on and in correct video type.
The remote control does not work.	Make sure there are no obstructions between the remote control and the unit. Make sure the remote control is pointing at the unit. Make sure the batteries are inserted or the polarity is correct. Make sure the batteries are not weak. Replace the weak battery.

Other Notes:

 Static or other external interfere may cause the player to behave abnormally. In this occurs, unplug the power-supply cord from the outlet and plug it in again to reset the player. If the problems persist, then please disconnect the power and consult a qualified technician.



“The television set may fall, causing serious personal injury or death”

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls.

 
If the existing television set is going to be retained and relocated, the same considerations as above should be applied.

Wall- mounting TV SET procedure and method

Step 1: Fix the metal frame the wall with screw as following figure1 and ensure it is firm.

Step 2: Fix the long strip metal stand to TV SET back with screws as following figure2 and ensure it is solid.

Step 3: Hook the TV SET to the metal frame setup fixed on the wall well , then fix firmly a protective screw to limit the position avoiding the TV SET loosen as following figure3

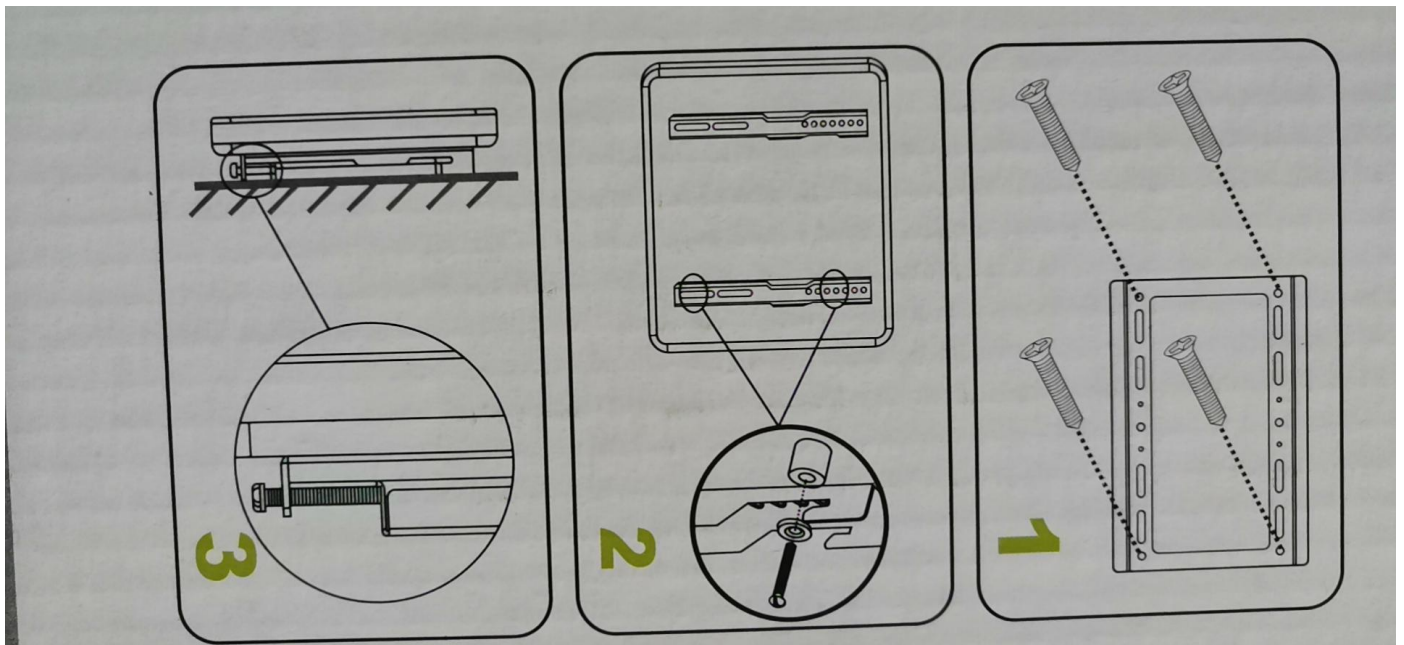

Protection to Fix Card

Thank you very much for using our products.

Product Model Number: _____ Product Name: _____

Factory Serial Number: _____

Purchase Store: _____

Purchase Date: _____ Invoice Number: _____

Customer Name: _____ Customer Phone: _____

Customer Couplet: _____

This couplet and the purchasing invoice are both considered as the Protection to fix warrantees, so please reserve them carefully.

Protection to Fix Elucidation

According to the prescription, the period for protecting to fix our company's led TV is one year. (From the day when you have the invoice) During this period, any belongs to under normal usage circumstance cause because of the product quality's problem of breakdown, our company will be responsible for giving free maintain.

1. In protect fix the period, if there is any breakdown which caused by the product's own quality, customers can bring the purchasing invoice and the customer couplet that has filled, and get the free repair from the repair center that has authorized by our company. And please send back the return couplet to our company in 15 days after buying machine.
2. Those machines that has refitted or added other functions by your own will not be accepted to repair.
3. Once the Protect to fix card or purchasing invoice has been changed, the protection to fix immediately expired.
4. This card and the purchasing invoice are both considered as the Protection to fix warrantees, so please reserve them carefully. Lose don't repair.

Free maintain won't be given under the following circumstance:

1. Without Protection to fix warrantees
2. The breakdown caused by the manipulation that hasn't follow the requests of the Manual.
3. The damage caused by the dismantle movement of a non-our-company authorized maintainer.
4. The breakdown, row harm or damaged because of the move or drop.
5. The damage caused by customer inappropriate preservation, maintain, or the usage.
6. Easy damaged pieces and present accessories are not concerned.
7. The breakdown and the damage caused by the Force majeure.

