








A	Remote
B	Receiver

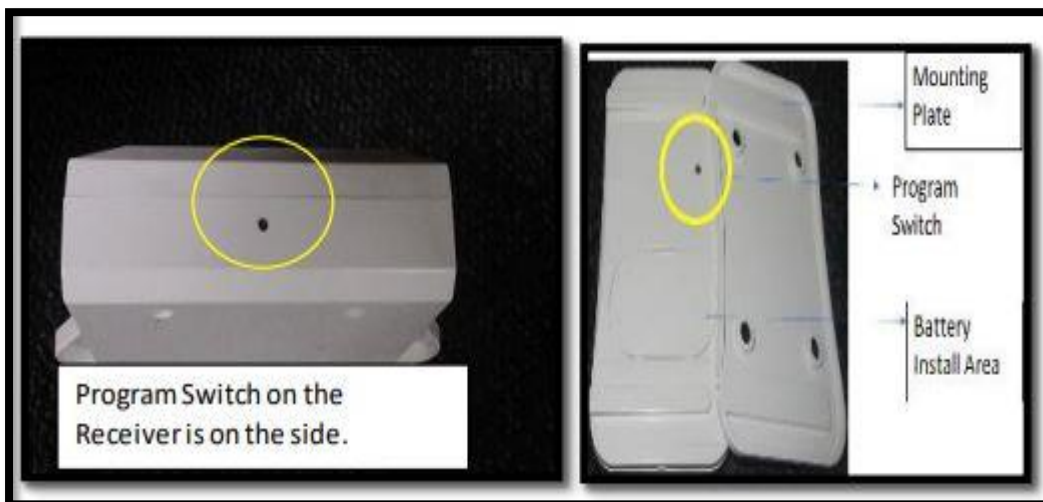

This manual is the property of:

Regent Caravans
 Warehouse 2/24-32 Stanley Dr
 Somerton VIC 3062
 Tel:(03) 9303 6100

No part of this manual in any form may be printed or reproduced without permission from Regent Caravans. All enquiries regarding this manual may be directed at plant address.

Opening of Receiver Cabinetry for Programming the Receiver	1. Locate the battery management system of the caravan.			
	2. The receiver is located just below the battery management system as shown in figure.			
	3. Use a knife to cut the silicone along the edges of the timber as shown.			
	4. Remove the screw caps and use an impact driver to unscrew both the screws and take out the timber.			
	5. Take out the receiver from the cabinet for programming as shown.			
	6. After programming is completed, ensure silicone is applied to the timber edges and screwed back on.			

PROGRAMMING


1. Pick up the remote, slide out the mounting plate from the back and insert the battery into the remote.
2. Press and hold the program switch at the back of the remote with any pin with plastic head, till blue light appears at the front of the remote indicating its ready to
3. Similarly press and hold the program switch at the side of the receiver for 5 seconds till the blue light appears on the master channel of the receiver as shown
4. After both receiver and remote indicates blue light, press the button you want to program on the remote for master channel.
5. As soon as you press the button the blue light on the receiver will blink and correspondingly a click sound will be heard indicating the receiver is programmed
6. Similarly to program other button to different channels on the receiver, again press and hold the program switch on the receiver and as soon as blue light appear
7. When the blue light appears on the next channel on the receiver, press the button on the remote which needs to be programmed and as soon as you press the
8. Similarly you can program the other button as well.

This manual is the property of:


Regent Caravans
 Warehouse 2/24-32 Stanley Dr
 Somerton VIC 3062
 Tel: (03) 9303 6100

No part of this manual in any form may be printed or reproduced without permission from Regent Caravans. All enquiries regarding this manual may be directed at plant address.


PHOTOS

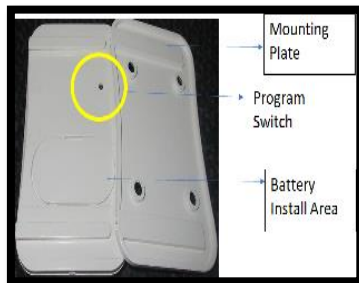


1

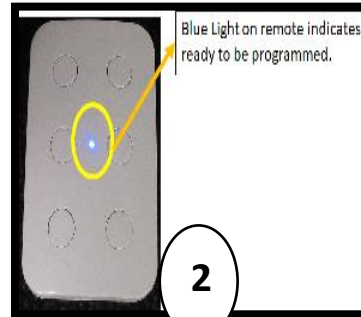


2

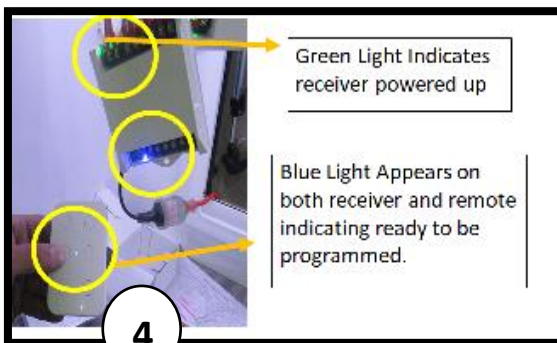


4

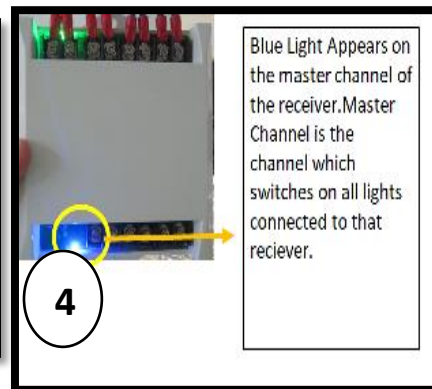

4

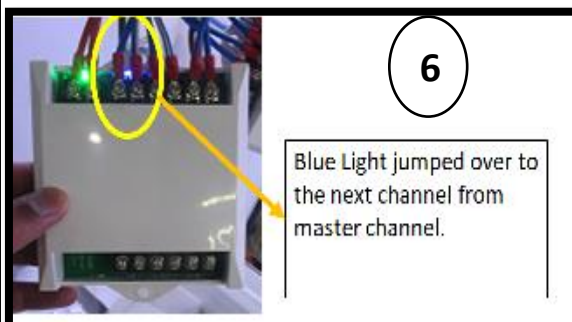

6

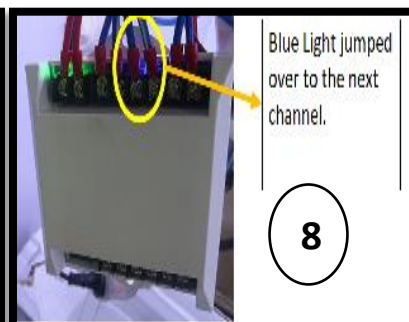

8

This manual is the property of:

Regent Caravans
 Warehouse 2/24-32 Stanley Dr
 Somerton VIC 3062
 Tel:(03) 9303 6100

No part of this manual in any form may be printed or reproduced without permission from Regent Caravans. All enquiries regarding this manual may be directed at plant address.

DELETE MEMORY OR REPROGRAMMING

In case you want to reprogram the entire thing or delete the entire memory , just Press and hold the programming switch on the receiver for 15 seconds until the blue light starts blinking and eventually stops, indicating all memory has been deleted.

POINTS TO REMEMBER

1. During programming the blue light on the remote and receiver should always be on indicating programming mode is on, but after the button is programmed the blue light on the receiver goes off indicating receiver channel has been programmed .
2. After all the buttons are programmed on the remote , press the program switch at the back of the remote to turn off the blue light indicating the remote is now in operation mode instead of programming mode indicated by blue light on the remote.

This manual is the property of:

Regent Caravans
Warehouse 2/24-32 Stanley Dr
Somerton VIC 3062
Tel: (03) 9303 6100

No part of this manual in any form may be printed or reproduced without permission from Regent Caravans. All enquiries regarding this manual may be directed at plant address.